



AT&T Business in a Box[®] Quick Start Guide

Please ensure that you have set-up the equipment before the date scheduled with your AT&T Order Manager for Test and Turn Up of your service

What's in the Box

The following components are included in your router package:



AT&T Business in a Box® 12 or 24 Port
Base Unit Router



Site Documentation
Package



RJ11 modem cable
Labelled ISE644 (Qty 1)



RJ45 Ethernet cable CAT6
Labelled ISE1015-025 (Qty 1)



Router power cable



RJ45 Coupler (Qty -1)



6 outlet power strip




RJ45 T1 Loopback Plug
(Qty – 1)



Understanding your AT&T Business in a Box[®] Equipment

AT&T Business in a Box[®] 12 or 24 Port Base Unit Router (24 port depicted)

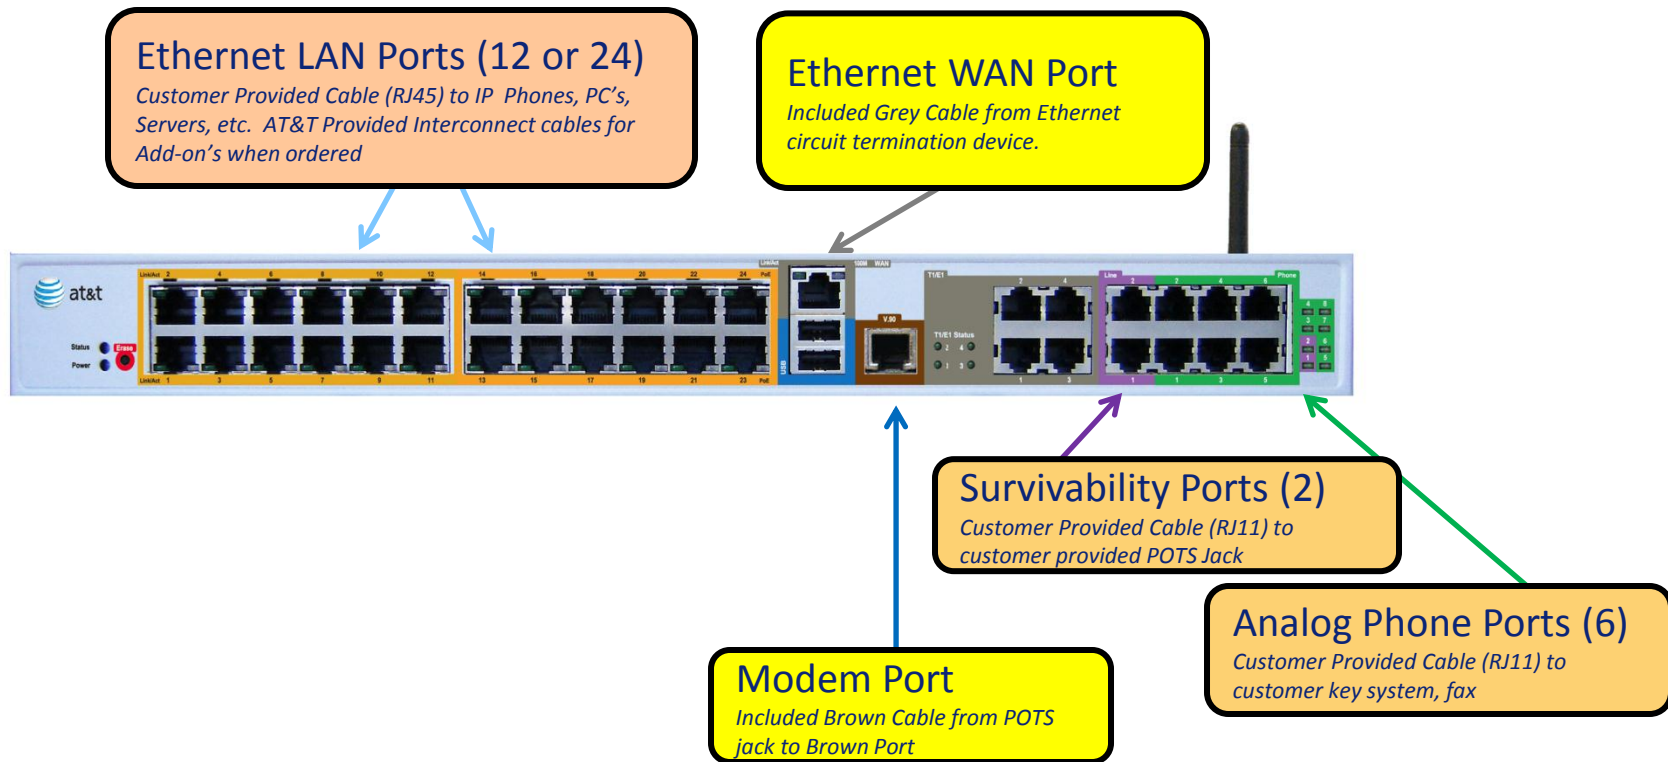

Step 1 – Wall Mounting Instructions (optional to Rack Mounting)

The AT&T Business in a Box[®] router may be wall mounted on a $\frac{3}{4}$ " or thicker plywood backing. The unit is too heavy to be mounted to drywall. Use the two (2) rack-mount brackets, eight (8) bracket screws (included) and four (4) $1\frac{1}{2}$ " wood screws (not included).

Complete the following steps:

- 1) Position the device so that the front panel is facing down and apply the rack-mount brackets with bracket screws to each side as shown in Figure 1. Rack-mount bracket position.
- 2) Attach the bracket to $\frac{3}{4}$ " or thicker plywood backing using four (4) $1\frac{1}{2}$ " wood screws as shown in Figure 2. Rack-Mount bracket on plywood backing.

Important: Cables will flow down and should be dressed using a wire minder. The unit should be mounted high enough that the technician can see the status lights**. See Figure 3 Installation example.

** It is recommended, but not required that a skilled technician mount the router on the wall.



Figure 1. Rack-mount bracket position

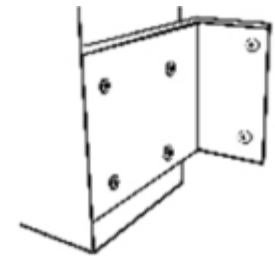


Figure 2. Rack-mount bracket on plywood backing


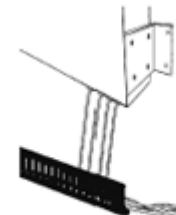


Figure 3. Installation example




Step 2 - Attach Power Cord to Router and Proper Grounding

Plug in power cord to router and attach customer provided ground cable

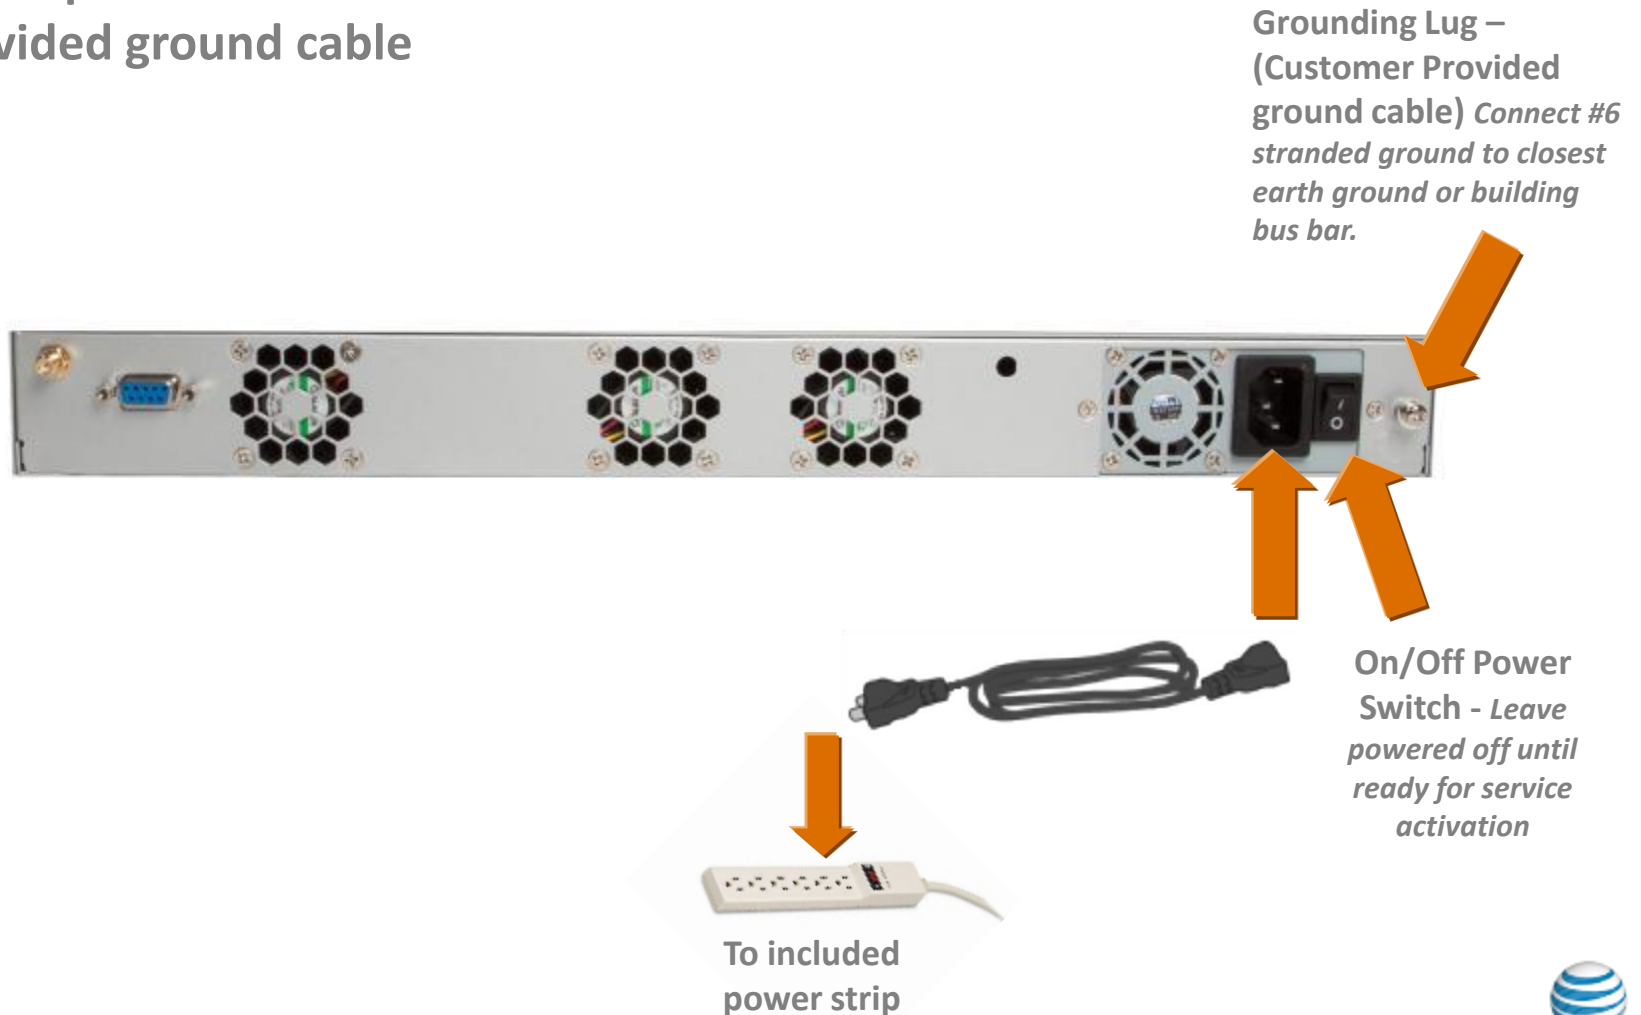

Step 3 - Connect Analog POTS line to Internal Modem

Connect customer provided Analog POTS line from wall jack to the internal modem using the provided brown RJ11 cable.

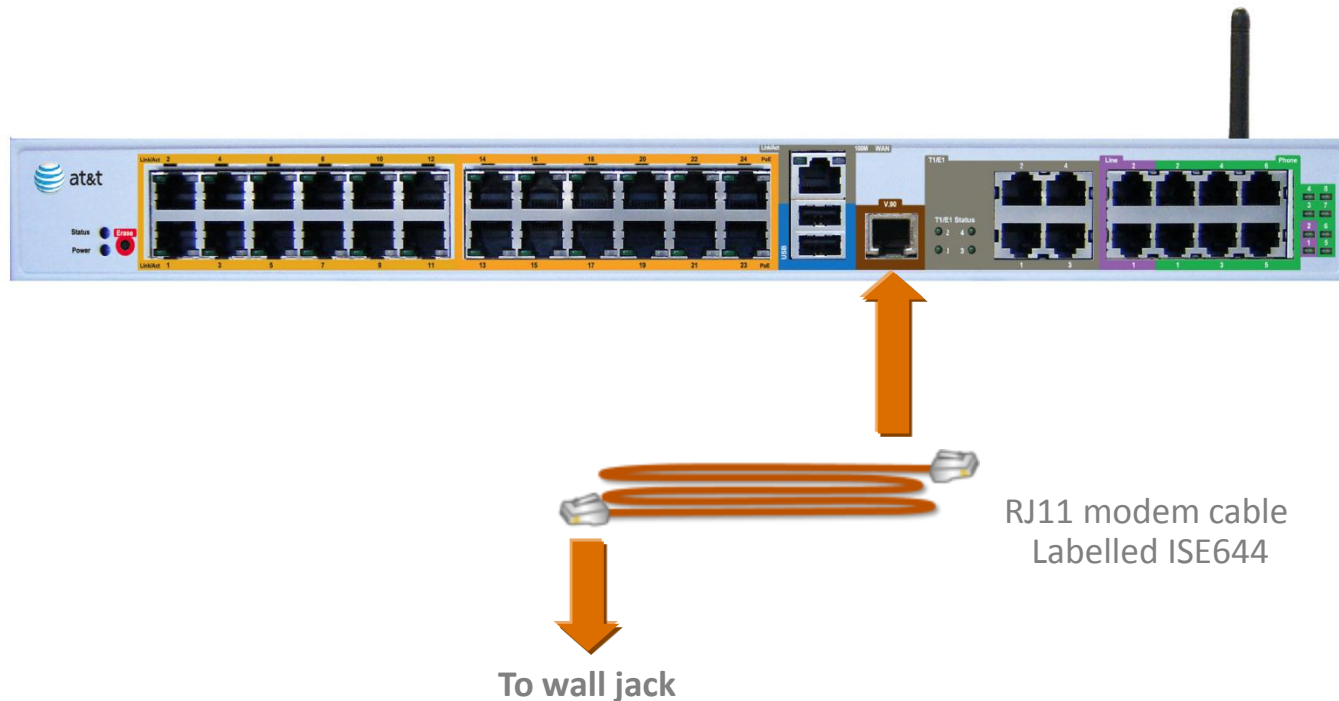


Note: The POTS line may be used in the turn-up of your service as well as by AT&T's Global Customer Service Center.



Step 3 - Connect Router to Ethernet Circuit

Connect your Ethernet circuit using the Grey Ethernet cable to the Ethernet WAN port pictured below.

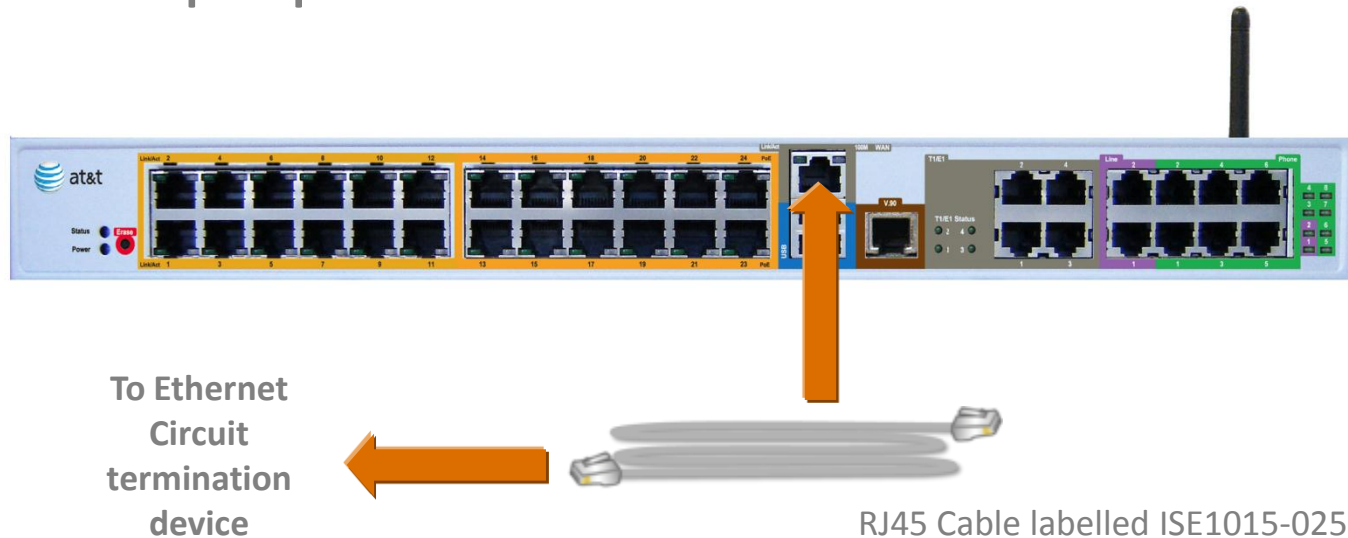

Note: The Ethernet WAN port on the router is electrical not optical.



Step 4 – Attach RJ45 Coupler and RJ45 Loopback plug to router

Locate the RJ45 Coupler and RJ45 Loopback Plug




Locate the RJ45 Coupler and RJ45 Loopback Plug included in the shipping box. Place the Loopback plug in one side of the coupler, remove the adhesive tape from the side of the coupler and attach to the router. The coupler is a holder to ensure the loopback plug is easily locatable should it be needed to troubleshoot your service.



Step 5 - Connect Router to your Ethernet LAN Devices

Connect your Ethernet LAN devices (PC's, printers, servers, etc.) to the integrated Ethernet switch or per instructions in your Site Documentation Package.

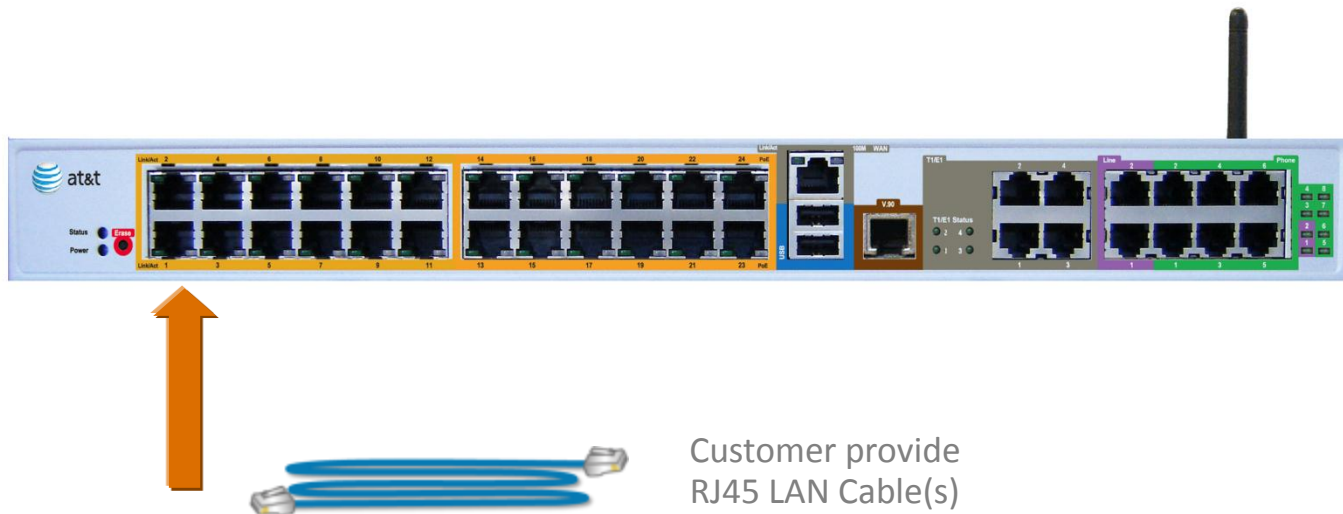


Note: If utilizing your own Ethernet switch/firewall behind the AT&T Business in a Box[®] router then utilize only Port 2 to interconnect.




Step 6 - Connect Router to your Analog Key System

Connect to your Analog Key System and/or Fax per instructions in your Site Documentation Package.

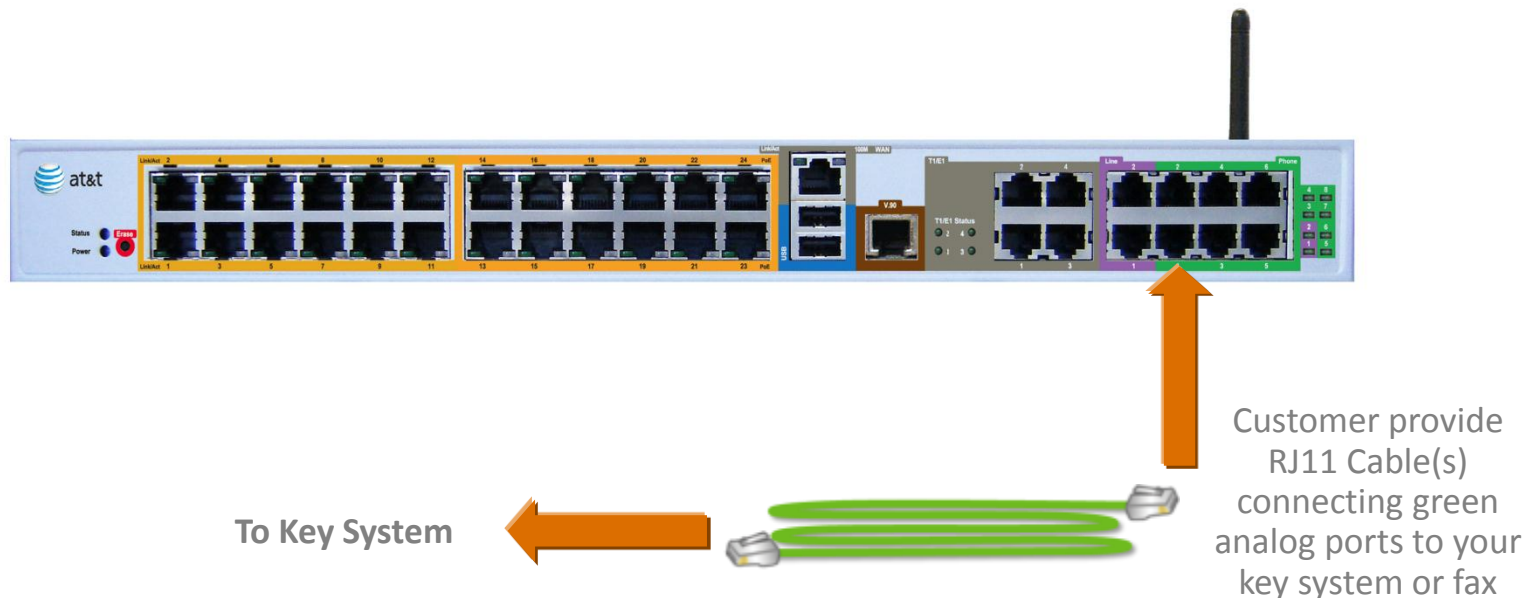

Step 7 (optional) - Connect Router to Analog POTS for Outbound Site Survivability

Connect up to 2 customer provided POTS lines to purple ports for outbound calling survivability.

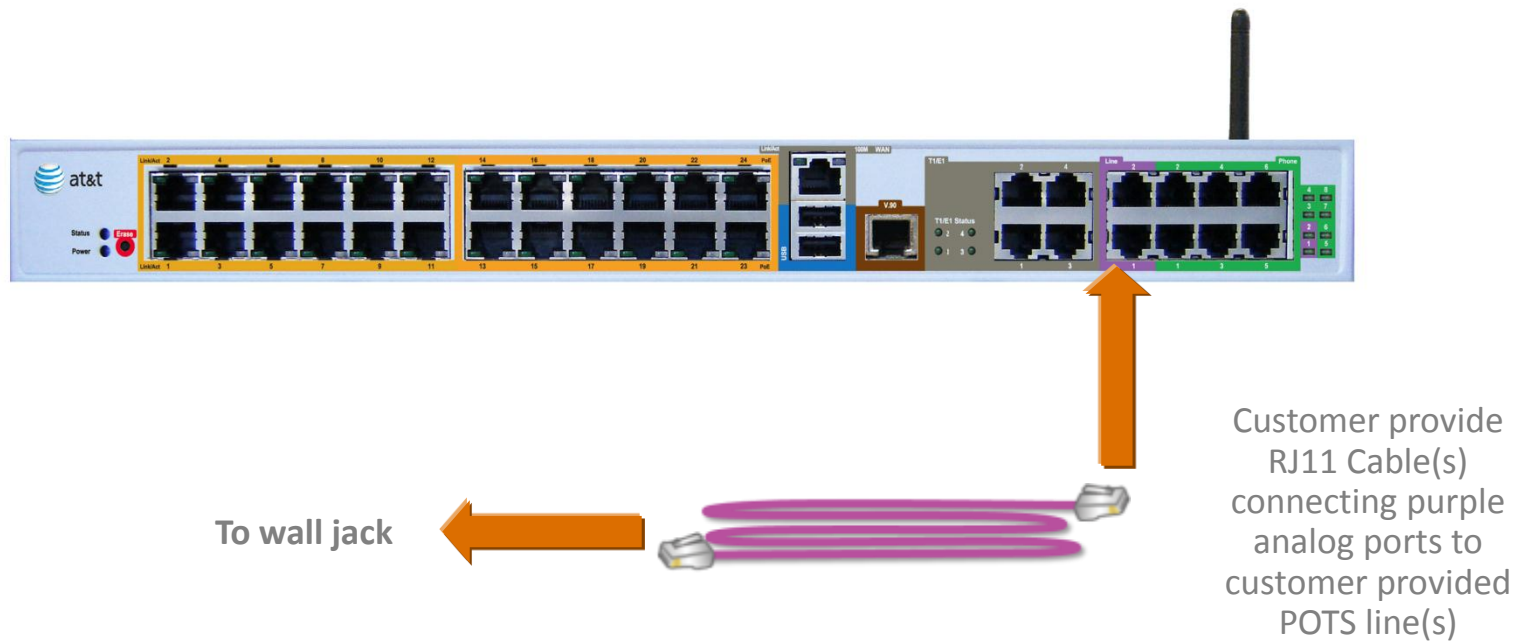

AT&T Business in a Box[®] User Guide

AT&T Business in a Box[®] includes integrated Wi-Fi, IPsec VPN and Point to Point Tunneling Protocol for remote access capabilities available with your service. A User Guide is available to assist customers with logging into the device using a web browser and configuring to your needs.

