



AT&T Business in a Box[®] BIB NextGen Quick Start Guide

Please ensure that you have set-up the equipment before the date scheduled with your AT&T Order Manager for Test and Turn Up of your service

What's in the Box

The following components are included in your router package:



AT&T Business in a Box® NextGen Base Unit Router



Analog Breakout Box with Amphenol Cable



Site Documentation Package



RJ11 modem cable
Labelled ISE644 (Qty 1)



Router power cable



6 outlet power strip




Note: Your solution may require other specific cables including WAN or telephony cables and will be provided in the box.



Understanding your AT&T Business in a Box[®] Equipment

AT&T Business in a Box[®] NextGen Base Unit Router

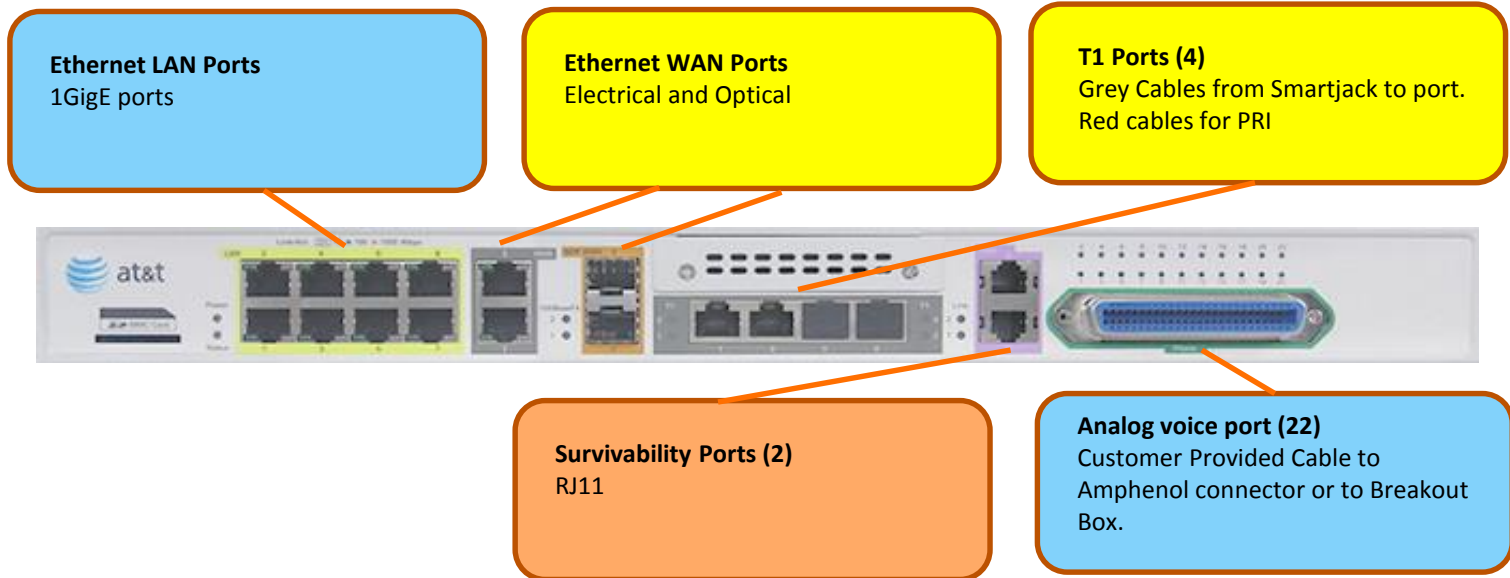

Step 1 – Wall Mounting Instructions (optional to Rack Mounting)

The AT&T Business in a Box[®] router may be wall mounted on a ¾” or thicker plywood backing. The unit is too heavy to be mounted to drywall. Use the rack-mount brackets, bracket screws (included) and 1½” wood screws (not included).

Complete the following steps:

- 1) Position the device so that the front panel is facing down and apply the rack-mount brackets with bracket screws to each side as shown in Figure 1. Rack-mount bracket position.
- 2) Attach the bracket to ¾” or thicker plywood backing using four (4) 1 ½” wood screws as shown in Figure 2. Rack-Mount bracket on plywood backing.
- 3) Optionally, attach the black Breakout Box with included rack mount hardware.

Important: Cables will flow down and should be dressed using a wire minder. The unit should be mounted high enough that the technician can see the status lights**. See Figure 3 Installation example.

** It is recommended, but not required that a skilled technician mount the router on the wall.

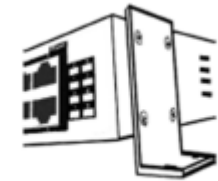


Figure 1. Rack-mount bracket position

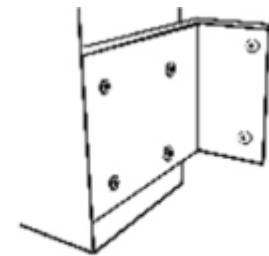


Figure 2. Rack-mount bracket on plywood backing


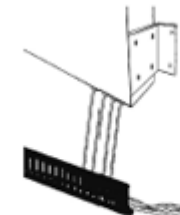


Figure 3. Installation example




Step 2 - Attach Power Cord to Router and Proper Grounding

Plug in power cord to router and attach customer provided ground cable

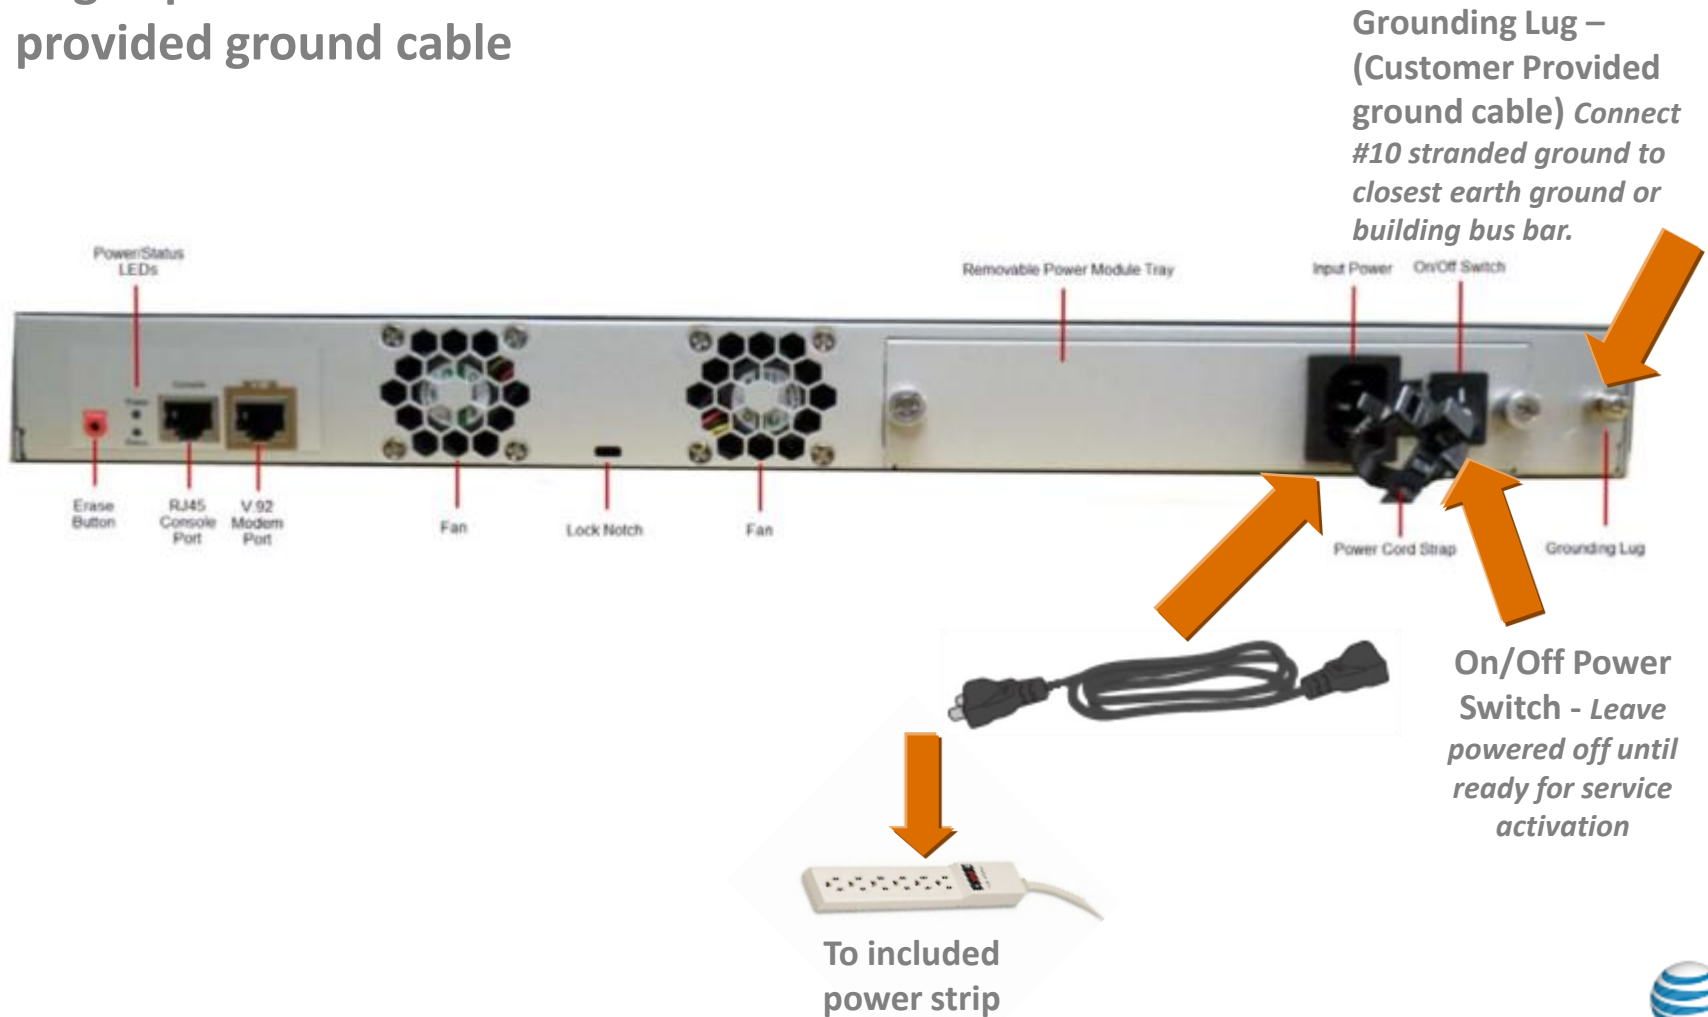

Step 3 - Connect Analog POTS line to Internal Modem

Connect customer provided Analog POTS line from wall jack to the internal modem using the provided brown RJ11 cable.

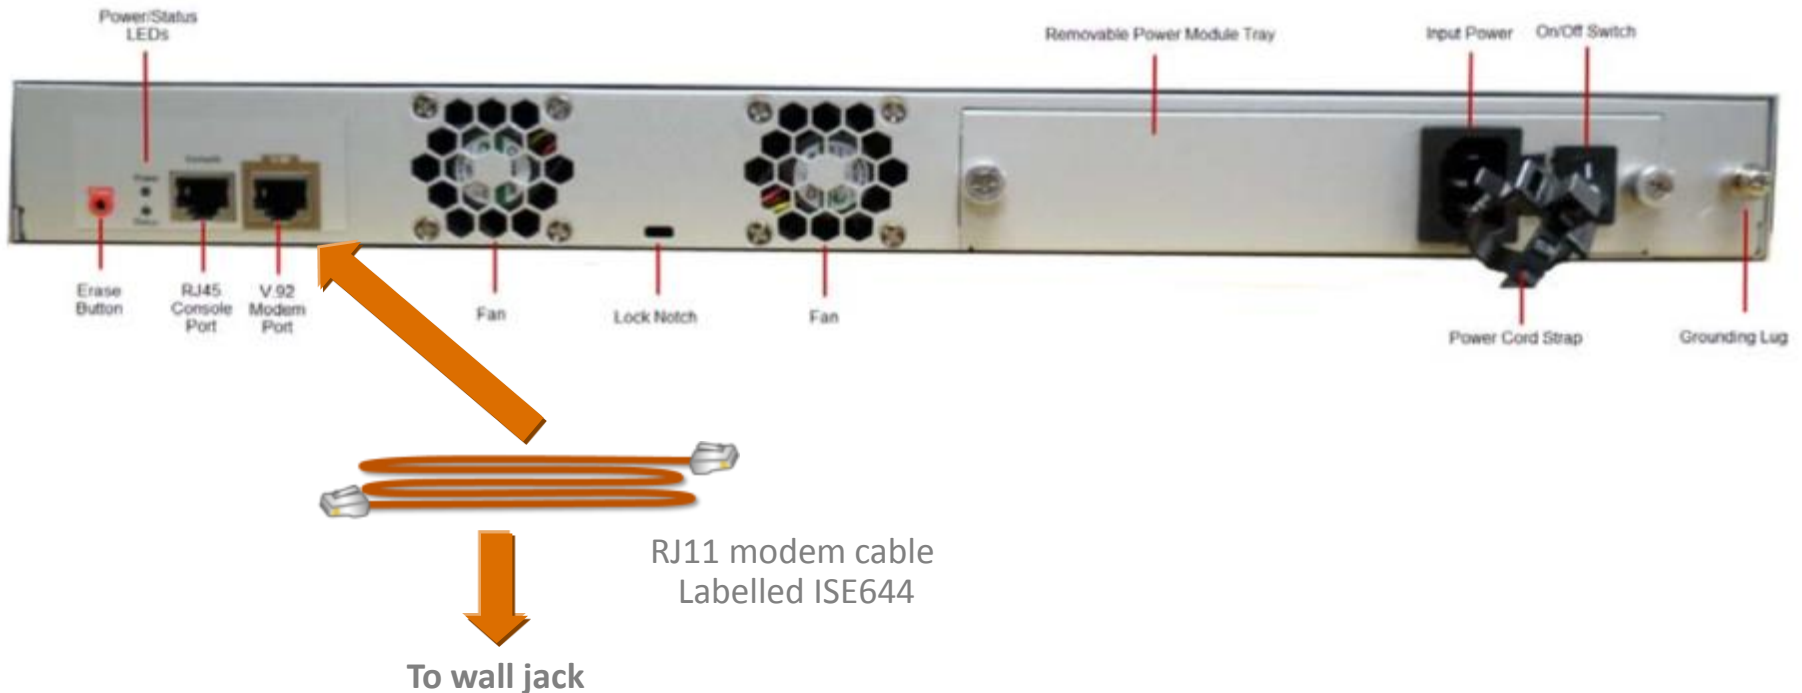


Note: The POTS line may be used in the turn-up of your service as well as by AT&T's Global Customer Service Center.



Step 4 - Connect Router to Ethernet Circuit

Connect your Ethernet circuit using the Grey Ethernet cable to the Ethernet WAN port pictured below.

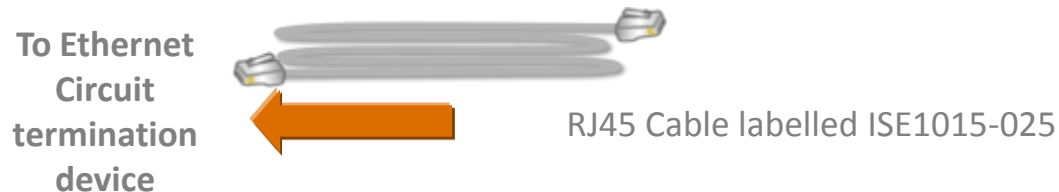

Note: The Ethernet WAN port on the router example is for electrical Handoff. Should your solution require optical handoff you will connect the fiber cable to the included SFP module and insert into the SFP slot depicted to the right of the example above.



Step 5 - Connect Router to your Ethernet LAN Devices

Connect your Ethernet LAN devices (External Firewall, External Customer Switch, PC's, printers, servers, etc.) to the integrated Ethernet switch or per instructions in your Site Documentation Package.



Customer provide
RJ45 LAN Cable(s)

Note: If utilizing your own Ethernet switch/firewall behind the AT&T Business in a Box[®] router then utilize only Port 2 to interconnect.



AT&T Business in a Box[®] User Guide

AT&T Business in a Box[®] includes integrated IPsec VPN and Point to Point Tunneling Protocol for remote access capabilities available with your service. A User Guide is available to assist customers with logging into the device using a web browser and configuring to your needs.

